


SOLDER-FREE & CHEMICAL-FREE connections for Copper, PEX and CPVC tubing


NO torches, NO crimping, NO chemicals, just...

PUSH-FIT

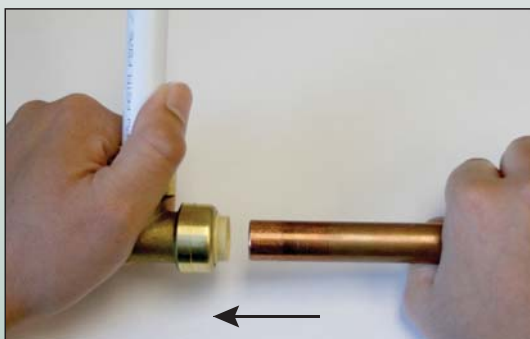

TO CONNECT

Push the tubing firmly into the fitting until it stops. A gentle pull will indicate if the connection has been properly made.

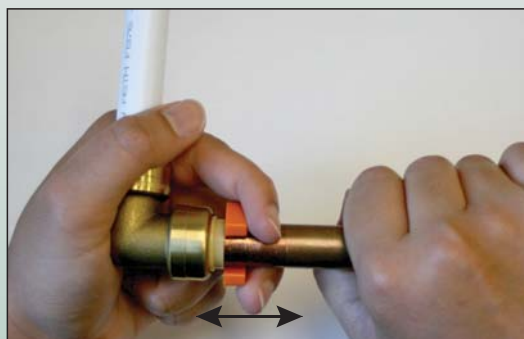

TO DISCONNECT

Slide the disconnect tool up against the fitting. Apply an even pressure to the tool and pull apart to separate.

THE PUSH-FIT ADVANTAGE

FAST No torches, chemicals or special installation tools required. Replaces solder, threaded, compression and crimp connections.

SIMPLE Simply push your tubing into the fitting or valve to connect. Connections can be easily disconnected and removed.

VERSATILE Works with copper, PEX and CPVC tubing. Available in a variety of valves, fittings and adapters.



Colour coded packaging for easy reference



LEAD
FREE



ANSI/NSF 61
ASSE 1061

1/2"

3/4"

1"